


HD007 - Wireless Keypad Pat. Pend.

Communicates with HDC Controllers

How to add HD007 to an HDC controller?

First, make sure the controller is in code learning mode (refer to the individual manual for entering code learning mode procedures).

Press button *password* or **password* or directly press *2. Keypad will transmit serial number for code learning.

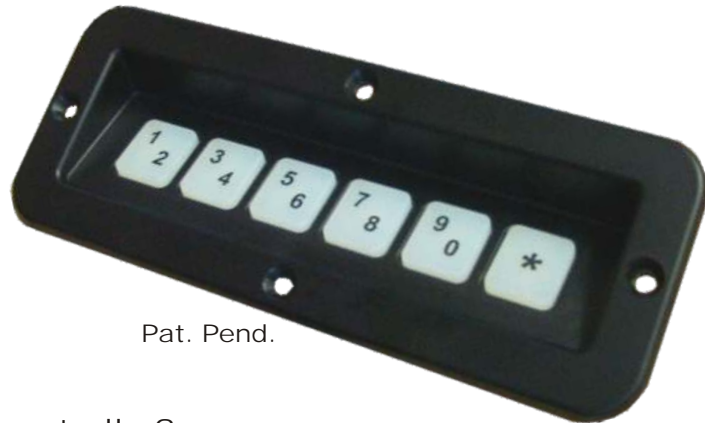

Pat. Pend.

How to use HD007 Keypad to control selected controller?

You can use HD007 to arm/lock or disarm / unlock controller unit, please refer to the description below:

Arm/Lock: press *password*, if password is correct, HD007 will transmit arm/lock code, led will flash quickly until you release * button, if password is incorrect, led will flash 4 times.

Disarm/Unlock: press **password*, if password is correct, HD007 will transmit disarm/unlock code, led will flash quickly until you release * button, if password is incorrect, led will flash 4 times.

How to modify your password?

The keypad has a factory default password 13579, for security purposes, you can change the password to a private setting, press ***old password * new password* to change password, if new password was accepted, led will flash 2 times for indication, otherwise, led will flash 4 times to indicate new password setting failure.

What to do if you forgot your password?

If you forgot your password, you can use super password ***28140190*** to reset the password to factory default "13579", if the controller alarm is armed, controller alarm will disarm at the same time.

How many times can you try to input password?

For security purpose, you have 3 chances to enter your password, if after 3 times the wrong password is entered the led will flash quickly for 10 seconds and the keypad is locked for 2 minutes. After 2 minutes, you can operate the keypad again.

How to replace the battery

Battery replacement is in the rear housing. Depress finger friction latch and remove back cover. Remove Part No. #GP23A 12V. Carefully replace battery observing the polarity. Reprogramming is retained during battery replacement, no programming is necessary.